

SOGA

家庭用

# MEGA 廚餘機皇

## 純淨全能家用廚餘機

型號: C-005-01-TW / C-005-02-HK

使用說明書



### 使用注意事項

誠摯感謝您的購買，如有任何疑問，請隨時參考線上使用手冊或聯繫客服。

※MEGA廚餘機皇內部溫度較高，使用不當可能造成危險。

※請仔細閱讀本使用手冊，正確使用。

奈米塗層內鍋  
5.2L業界最大

# 目錄 Contents

## 中文目錄

重要安全預防措施	01
關於 MEGA 廚餘機皇	04
控制面板功能說明	05
其他功能說明	06
包裝內容與產品規格	07
首次使用	08
操作指南	10
食材分類原則	13
有機模式	15
保養與維護	16
故障排除	18
保固及正確處理 MEGA 廚餘機皇	19

## English Contents

IMPORTANT SAFEGUARDS	20
ABOUT MEGA COMPOSTER	24
FUNCTION DESCRIPTION	25
OTHER FUNCTION DESCRIPTIONS	26
PACKAGE CONTENTS	27
BEFORE FIRST USE	28
OPERATION INSTRUCTIONS	30
WASTE CLASSIFICATION GUIDELINES	34
TIPS FOR GREAT PERFORMANCE	36
CARE & MAINTENANCE	37
TROUBLESHOOTING	39
WARRANTY INFORMATION	41

# 重要安全預防措施 ▣請務必遵守

使用MEGA廚餘機皇及其配件時，請遵循以下安全預防措施以減少嚴重受傷的風險。在操作之前，請仔細閱讀所有的說明、安全提示和警告。

- 1.仔細閱讀所有隨產品附帶的說明資料。
- 2.為了避免觸電，請勿讓電線、插頭和便攜式電器接觸水或其他液體。
- 3.請勿將主機浸入任何液體，包括水。
- 4.請將設備和電源線放在兒童無法觸及的地方。
- 5.若 MEGA 廚餘機皇由兒童或身心障礙者使用或靠近，請確保有人密切監督。
- 6.為避免意外啟動，在不使用時請拔掉插頭，更換零件、清潔之前也要如此。
- 7.MEGA 廚餘機皇必須插在接地正確的插座。
- 8.請勿讓電線垂掛在櫃台或桌邊。
- 9.在循環結束後約 35 分鐘後，請讓 MEGA 廚餘機皇冷卻後再打開蓋子。在處理 MEGA 廚餘機皇內部零件前，請等待其完全冷卻，並使用提供的把手或旋鈕安全操作。
- 10.在 MEGA 廚餘機皇運行時，請勿打開蓋子。請務必在開啟蓋子之前停止循環模式。
- 11.除非 MEGA 廚餘機皇完全結束循環且經歷所有循環模式，否則請勿將手放入其中。
- 12.除非 MEGA 廚餘機皇完全結束循環且經歷所有循環模式，否則請勿將手放入其中。

## MEGA 廚餘機皇：斷電及故障排除指南

機器無法運作時，請遵循以下步驟進行故障排除，並注意安全措施。

### 1. 斷電及重設


- 請確認您的廚房是否有 GFI 斷路器。靠近水槽的插座可能設有此裝置。
- 若 MEGA 廚餘機皇無法運作，請先拔掉插頭。
- 在重置前請關閉牆上的插座或斷路器。

### 2. 避免斷路器持續跳閘


- 如果斷路器持續跳閘，請將 MEGA 廚餘機皇從插座中拔出。
- 讓機器靜置 24 小時後再重新接通電源再試一次。

### 3. 尋求客戶服務支援

- 如果問題仍然持續存在，請即刻聯繫我們的客戶服務部門以取得協助。

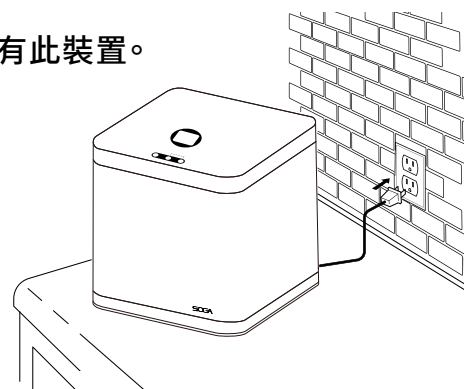

13. 絕對不要觸碰移動部件。當內鍋裝置在 MEGA 廚餘機皇內時，請勿伸手到鍋內。在調整鍋內內容之前，請將內鍋從 MEGA 廚餘機皇中取出。
14. 請勿操作帶有損壞電線或插頭的任何電器。如電源線損壞，必須由製造商、其服務代理商或同等合格的人員更換，以避免危險。
15. 請勿操作顯示故障徵兆或以任何方式受損的任何電器。
16. 使用製造商未建議或銷售的附件可能導致火災、觸電或受傷。
17. 若 MEGA 廚餘機皇暴露在任何外部環境下，請勿在室外操作機器。
18. 請勿將 MEGA 廚餘機皇放置在或靠近熱氣或電爐上。
19. 請勿將 MEGA 廚餘機皇放入加熱的烤箱內。
20. 請避免將 MEGA 廚餘機皇暴露在直射陽光下。
21. 請勿拆卸、修改、變更或任何方式調整 MEGA 廚餘機皇。
22. 為了讓空氣流通，請確保將 MEGA 廚餘機皇至少與所有牆壁保持 15 公分的距離，並放置在通風良好的空間。(圖1)
23. 請確保 MEGA 廚餘機皇放置在平坦、乾燥、穩固的表面上。
24. 請勿在未安裝內鍋的情況下，直接將廚餘放入 MEGA 廚餘機皇內
25. 請勿食用或攝取脫水食物廢料，或任何已放入桶中的廚餘。
26. 桶內壁有一條薄而凹陷的填充線，標示出建議的最大容量。請勿在此線以上加入廚餘。(圖2)
27. 請勿在超過最高線(5.2公升)後擠壓和添加廚餘。過度裝填桶可能造成堵塞。(圖2)
28. 請確保沒有任何食物廢料落在桶外，進入機器內部。
29. 請勿將比人手大的任何食物廢料放入桶內。請確保切碎堅硬的植物莖/纖維蔬菜(例如：花莖、西蘭花莖、羽衣甘藍莖等)。

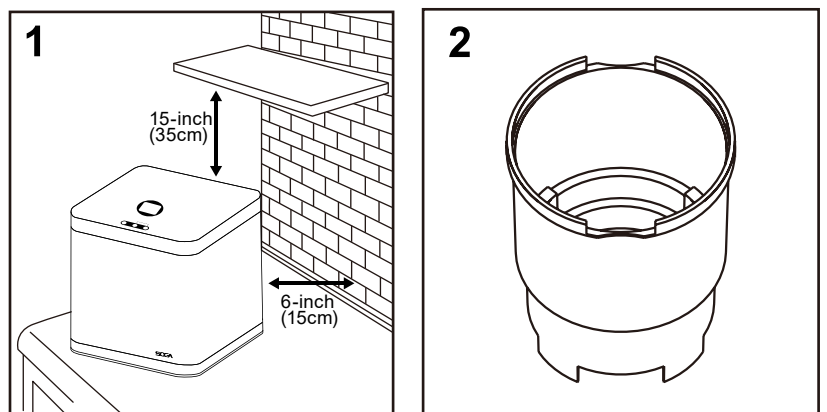


## 警告

### 保存這些指示 僅限家庭使用

本使用與保養手冊中的指示無法涵蓋所有可能發生的情況和狀況。操作和保養任何家電時，應保持常識和謹慎。

- **觸電危險**  
請勿讓底座接觸任何液體，包括水。不遵守這一點會導致電擊危險。
- **僅使用接地插座**  
請確保產品僅連接到接地插座。使用非接地插座可能導致危險。
- **保持接地線完好**  
請勿移除或損壞接地線，以確保使用安全。
- **不要使用轉接器或延長線**  
請直接插入接地插座，並避免使用轉接器或延長線。
- **拔掉插頭**  
在清潔或不使用產品時，請務必拔掉插頭，以避免潛在的危險。
- **安全第一**  
不遵守上述規定可能導致嚴重危險，甚至導致死亡或電擊。

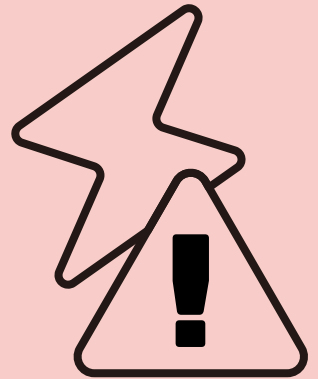

保存這些指示 僅限家庭使用

# 關於MEGA廚餘機皇

MEGA 廚餘機皇將您的廚房廢棄物變成富含養分的堆肥。這款設備有以下特色：

• **高效回收食物廢棄物：**

強大的馬達、內建粉碎器和碳過濾器將食物殘渣加工，消除異味，迅速生成堆肥。

• **環保操作：**


有機模式將食物廢棄物轉化成有機肥料，環保處理廚餘，同時附帶雙活性碳匣搭配UV殺菌，處理過程零異味，打造潔淨廚餘新時代。

• **減少碳足跡：**


通過使用 MEGA 廚餘機皇，您不僅能夠為自己的花園或室內植物製造堆肥，還能有效減少被送往垃圾處理場的廢物。

t

產品圖

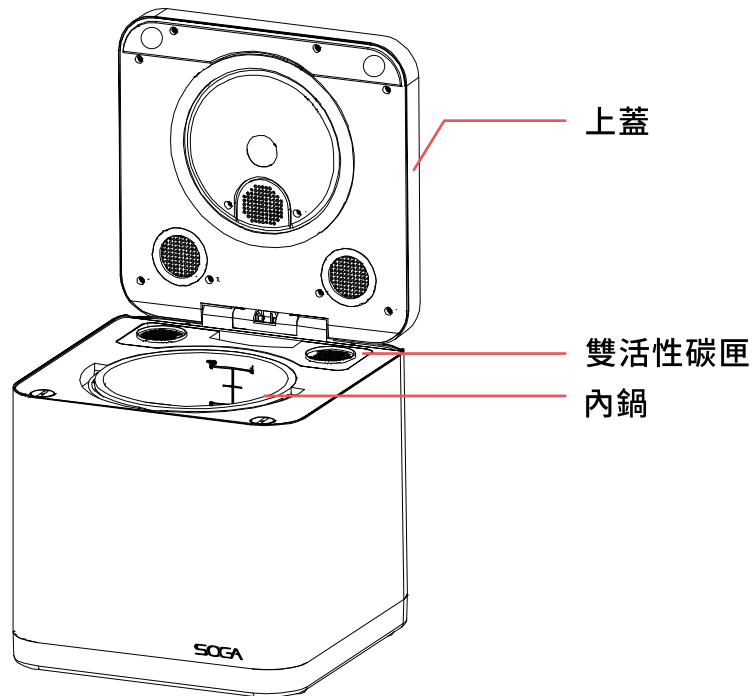

控制面板

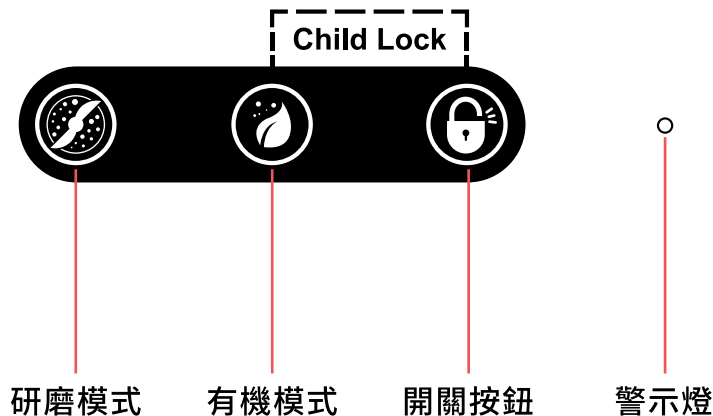


# 控制面板功能說明

## 按鍵說明




### 研磨模式

插入插座，然後按住 (🌀) 3 秒啟動研磨模式，工作時指示燈常亮。  
要退出此模式，請再次按住 3 秒鐘。

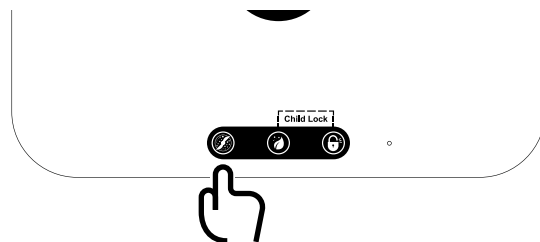


### 有機模式

投入環菌錠，並長按 (🌿) 3 秒啟動模式，工作狀態下指示燈常亮。  
要退出此模式，請再次按住該鍵 3 秒鐘。

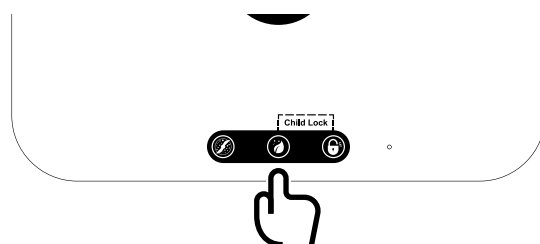


### 開關按鈕

按住 (🔒) 3 秒即可打開蓋子，工作狀態下若需打開蓋子，按住該鍵 3 秒即可打開蓋子。

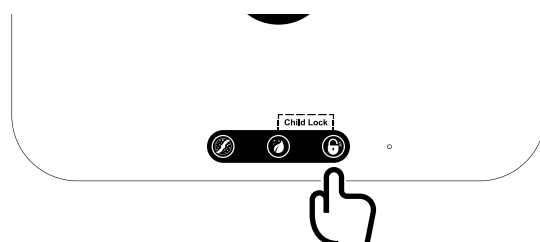

### 警示燈

- 當機器被堵塞或溫度異常升高時，警示燈會亮起。功能啟動中則會閃爍表示。

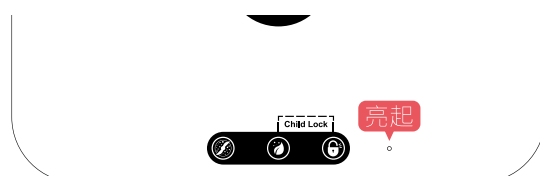



# 其他功能說明

## 特殊功能說明


### 一鍵清洗 (大約 30 到 45 分鐘完成清潔)

將 1500 毫升水及適量洗碗精倒入桶中，並按住 (☉+☉) 3 秒鐘，並在液晶顯示面板顯示 (☉) 則代表啟動成功。

一鍵清洗運作時，(☉) 和 (☉) 會常亮著。

再次按住 (☉+☉) 3 秒鐘即可退出此模式。


※在清潔完成後，需手動關閉、退出此模式，以確保機器正常運作。

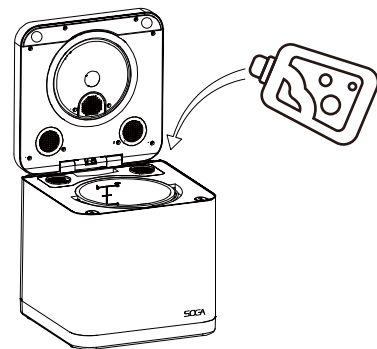


### 兒童安全鎖

兒童鎖是一種安全功能，可防止兒童意外啟動裝置。按住 (☉+☉) 3 秒啟動，(☉) 常亮則代表啟動成功。


要退出此模式，再次同時按住 (☉+☉) 3 秒鐘，即可取消兒童安全鎖功能，並可正常開啟。

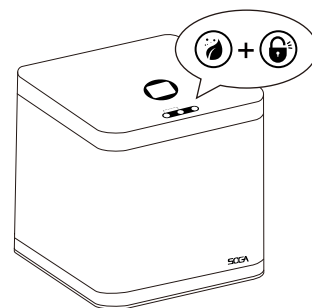


# 包裝內容與產品規格

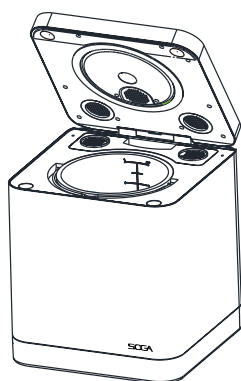


MEGA廚餘機皇

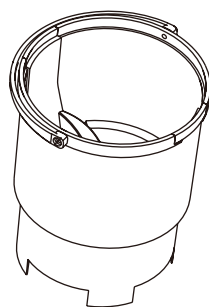

內鍋

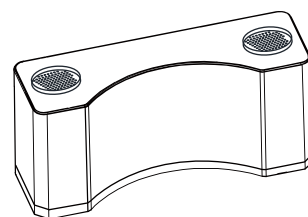


雙活性炭匣

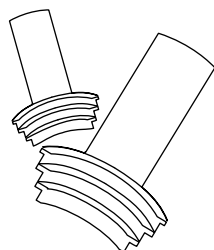

可拆式刀片



有機環菌錠

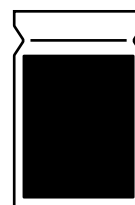

活性炭補充包


產品名稱	家用廚房廢物處理器
輸入	C-005-01-TW : 100-110V C-005-02-HK : 220-240V
容量	5.2L
產品淨重	12.2KG
產品尺寸	314X314X368(mm)
功率	最大功率650W
廚餘體積減少	研磨模式: 85% 有機模式: 90%
廚餘處理時間	研磨模式: 3-8H 有機模式: 6-14H
噪音水平	<45dB

# 首次使用須知


## ■ 活性炭替換步驟

首次使用前，請將活性炭先添加至活性炭匣中。確保廚餘機的正常運作並發揮最佳除臭效果。


- 1** 將 MEGA 廚餘機皇及其附件從所有包裝中取出。

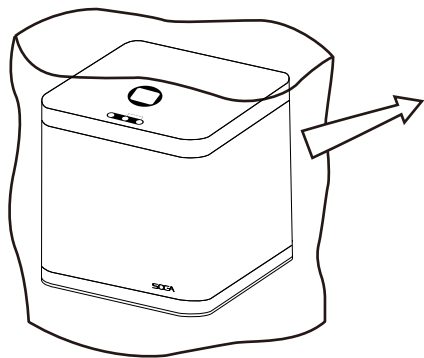

- 2** 將 MEGA 廚餘機皇放在穩固且平整的表面上。接著連接電源。

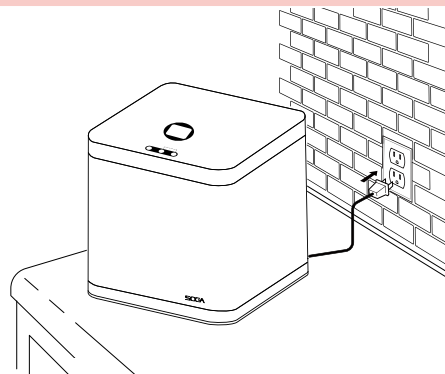


- 3** 按住蓋子開關按鈕 (🔒) 3 秒鐘以打開蓋子。

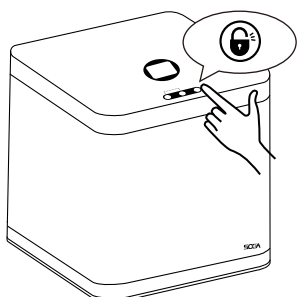

- 4** 按住蓋子開關按鈕 (🔒) 3 秒鐘以打開蓋子。




- 5** 雙活性碳匣底部為開蓋位置，將手指放在蓋子的凹槽中，向左右拉動

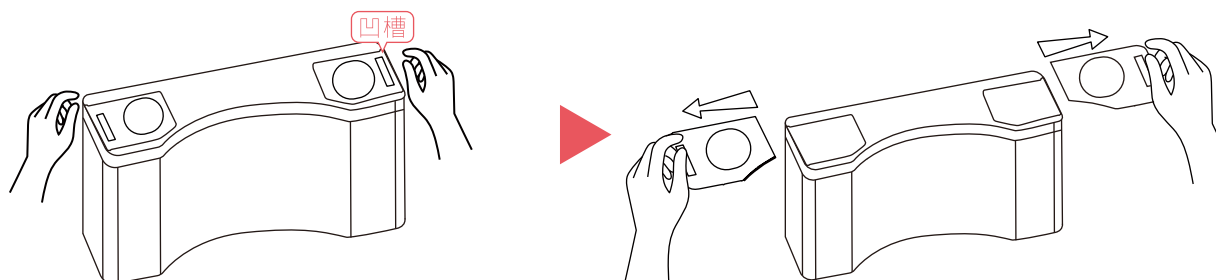

6


將新鮮的活性炭倒入活性炭匣中，分別倒入碳量至八分滿。

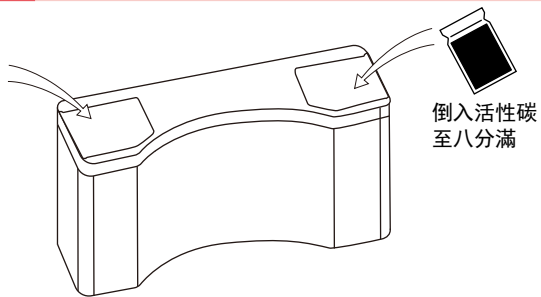

※填充至八分滿的活性炭匣可最大化吸附效能，促進空氣流動，提升活性炭效益。


7

用雙手沿著左右插槽滑動蓋子，直到它安全地扣上。

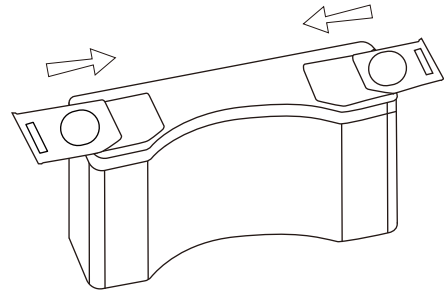

8

將雙活性炭匣安裝回 MEGA 廚餘機皇中。

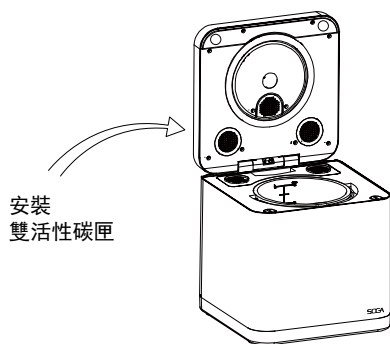

## ■ 操作指南

### MEGA廚餘機皇運作模式

MEGA廚餘機皇擁有兩種不同模式，請務必選擇最適合您需求的模式。以下是每個模式的詳細資訊：

#### 研磨模式



可迅速乾燥並減少廚餘的大小和重量。它會自動調節溫度和濕度大幅提升效率。適合希望在低能耗的情況下獲得最快結果的使用者。

研磨模式工作時間：3-8 小時。

※避免在研磨模式下使用生物塑料、可堆肥的商業商品和包裝材料。

#### 有機模式



透過使用環菌錠，將廚餘迅速轉化為有機堆肥。

添加一顆環菌錠，並在控制面板上選擇“有機模式”。設備將自動運行一段特定時間，直到廚餘完全分解，整個過程需要 6-14 小時。

※節能省電：兩種模式均採用智能變頻技術，根據廚餘硬度自動調整馬達扭矩，有效節能並降低能耗。

## ■ 操作設備

1

插入電源插座。

※如果設備開啟但在 15 秒內未啟動「研磨模式」或「有機模式」，設備將自動進入睡眠模式。

2

按住蓋子開關按鈕 (  ) 3 秒鐘以打開蓋子。

3

從 MEGA 廚餘機皇中取出內鍋。

使用手柄，從 MEGA 廚餘機皇中垂直拉出內鍋。


4

將廚餘放入桶中。


可參考第 15 頁的「MEGA 廚餘機皇的食材投放種類」進行指引。

#### 廚餘倒入注意事項


- 確保廚餘能輕鬆放入內鍋，無需用力。
- 需要時，可將廚餘切割成小塊。
- 將內鍋填滿至最大線 (5.2 公升)。
- 如欲選擇有機模式，請添加 1 個環菌錠

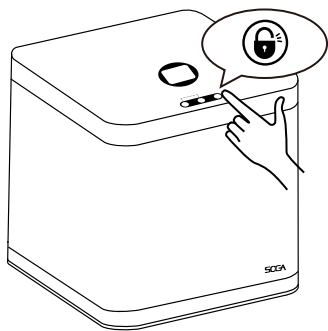

開啟蓋子開關

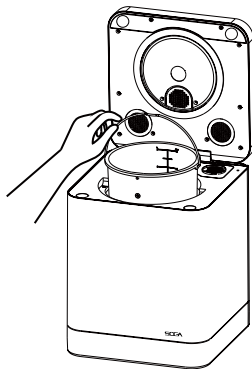

取出內鍋

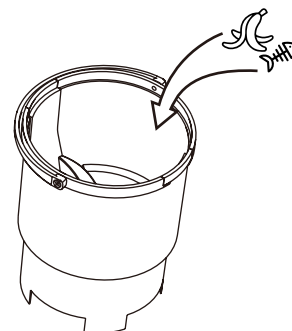


將廚餘放入桶中

# 5

將內鍋放入 MEGA 廚餘機皇中，對準防燙手把與中心軸（內部邊緣的兩個凹陷區域），然後將防燙手把放回原位。

※如果內鍋不能輕易地放入機器內，請稍微轉動內鍋確認是否對齊，若是仍然無法安裝，請稍微轉動內鍋底部的螺栓，然後再試一次。

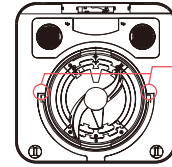

將防燙手把與這兩個凹陷區域對準

# 6

合上蓋子。

可參考第 15 頁的「MEGA 廚餘機皇的食材投放種類」進行指引。

## 研磨模式

- 按住 (🌀) 3 秒以嗶聲啟動研磨模式。
- 在進行過程中，若需暫停裝置，請按住 (🌀) 3 秒

## 有機模式

- 按住 (🌿) 3 秒以嗶聲啟動有機模式。
- 在進行過程中，若需暫停裝置，請按住 (🌿) 3 秒。

# 7

啟動功能，按下下方的按鈕。

## 一鍵清洗


同時按住 (🌀 + 🌿) 3 秒鐘即可啟動自動清潔模式。(🌀) 和 (🌿) 在工作狀態下會一直亮著，並在液晶面板顯示 🌀 則代表啟動成功。要退出此模式，再次 (🌀 + 🌿) 3 秒鐘即可。

一鍵清洗模式約在 20-30 分鐘後完成。

### 注意：

- 在運行過程中，如果警示指示燈亮起，表示機器堵塞或溫度異常過高。您可以暫停機器，打開蓋子進行檢查。
- 如果附近有兒童，建議啟動兒童鎖定模式。按住 (🌿 + 🔒) 3 秒鐘啟動，聽到提示音後即可啟動兒童鎖定模式。如果想取消此模式，再次按住 (🌿 + 🔒) 3 秒鐘，同樣聽到提示音即可解除兒童安全鎖。


建議的水位線  
超過此處

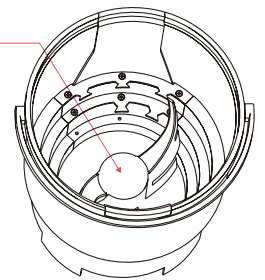

## 刀片安裝重點

1. 將刀片輕輕放置於凹槽中。
2. 若需要拆卸並重新安裝，請確保安裝時底部無任何廚餘髒污，並確認刀片緊貼鍋壁，避免刀片底部有凸起，以免造成運轉卡死的情況發生。
2. 注意將刀片貼著凹槽邊緣，順著凹槽滑入。
3. 確保刀片完全安裝，並且貼合鍋壁，以確保穩固性和安全性。

※本在拆卸刀片時，請小心凹槽的直角轉折處可能有些尖銳，避免刮傷手部。

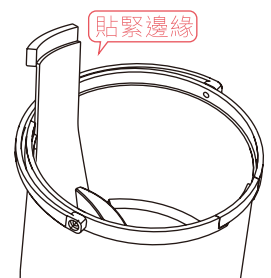

## 完成處理流程

處理完成後，產品會發出十聲提示音進入睡眠模式。


- 將內鍋取出並根據需求使用廚餘粉末。
- 將廚餘的粉末丟進子母車或垃圾桶。
- 有機模式產生的堆肥可以直接添加到您的植栽中

關於如何為您的植栽提供養分的詳細說明，請參閱第 15 頁的"有效使用有機模式"。

備註：在睡眠模式中，攪拌刀片會以順時針方向慢速旋轉 100 秒，接著每 15 分鐘以逆時針方向旋轉 100 秒。設備的內部風扇也會與攪拌刀片同步啟動和停止，確保內鍋的溫度保持在 85°F/30°C 以下。

### 刀片拆卸和清潔

打開蓋子，使用手柄將內鍋從機器中取出，然後拉出兩側的可拆卸刀片以進行清潔。

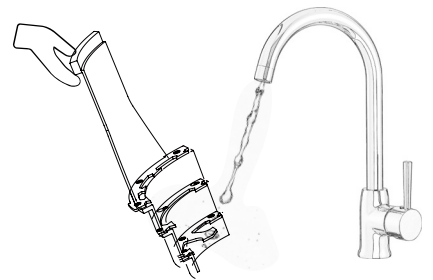

# 食材分類原則



## 以下是可放及不可放入機器的食材參照表：

您可以在所有模式下放入食物廢料。

各種食物廢料的混合可以讓機器更有效地運作並獲得最佳結果。

處理完成的粉末，可視為一般垃圾丟棄即可。


## ○可處理食材



硬骨頭  
(雞、牛、豬、羊)




水果和  
蔬菜殘渣

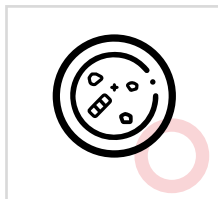


剩菜剩飯、  
餐盤刮料




碎肉

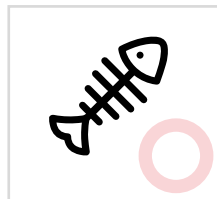


軟骨頭  
(魚)

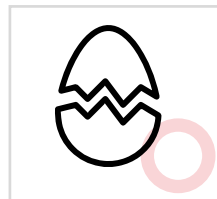

軟殼  
(蛋殼、蝦)

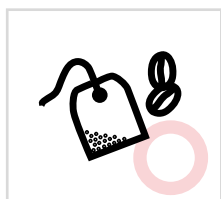

咖啡渣、濾紙  
和茶包

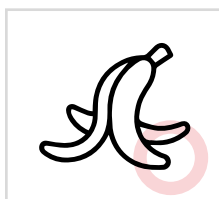

軟果皮



果皮  
(西瓜、甜瓜)



堅果



澱粉類  
(麵包、麵食、米飯、土豆、  
麥片和其他穀物)



乳製品  
(乳酪、優格)



果核  
(酪梨、桃子、杏子、  
油桃、芒果)



室內植物、  
植物和花卉



修剪後的  
植物根葉



植物梗/纖維  
(花梗、花椰菜梗、  
羽衣甘藍梗等)

### 注意

建議堅硬的植物梗/纖維蔬菜可切碎，以防在研磨過程中卡住。如果添加不應放入的物品損壞了桶，將不在保固範圍內。



## × 不可處理食材



烹飪油、油脂、液體



肥皂、洗髮精和潤髮乳



有膠層的袋子  
(洋芋片、餅乾、寵物食品)



 
髒污尿布、嬰兒濕巾



香煙



金屬、塑膠、玻璃



鋁箔包裝



尿布、濕巾、衛生用品



蔬果網袋



聚苯乙烯泡沫



寵物排泄物



酒精

# 有機模式

## 溫馨提示



可以將廚餘放入所有模式中。  
多樣化的食物廢棄物混合可以讓機器發揮最佳效果。

1. 生廚餘效果更佳，熟廚餘則效果較有限。
2. 廚餘和碎屑中水果和蔬菜的多樣性越大，最終效果越好。
3. 均勻混合各種類型廚餘。
4. 不要將未處理的廚餘放置太長時間。必要時可先進行處理。
5. 可處理生物塑膠。
6. 避免大量濃稠或富含水分的食物，例如：調味料和高糖水果。
7. 有機模式下，使用環菌錠可改善廚餘分解，增加益於植物的微生物含量，並進一步抑制異味。
8. 內鍋中的廚餘不需要經常清洗，因為在廚餘經過多次的發酵和分解後，其有機肥力會更強。

### 有效使用有機模式

• MEGA廚餘機皇有機模式生產的堆肥可以用來植物栽培。

• 將有機模式堆肥與土壤以 1:10 的比例直接混入植物盆栽、花園中。



**1:10**



• 雙活性碳匣的活性碳一旦失效，也可以用作土壤的肥料，以 1:6 的比例與土壤混合。




**1:6**




## 堆肥的利用

收成的堆肥可用來製作有機肥料，其餘部分可存放在密封容器中。

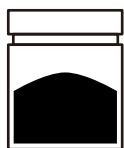

收成的堆肥也可作為一般垃圾處理。

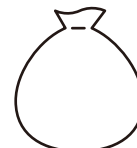

# 保養與維護

## ■ 清潔




### 每週清洗一次內鍋(建議)

- 1 確保清潔前已拔掉插頭。
- 2 您可以使用矽膠刷清理機器內部壁面，包括排氣過濾器上的任何殘留物。
- 3 內鍋可直接進行清洗。



**注意** 不要將整個機器浸入水中。過多的水會造成內部電子元件嚴重損壞，並可能導致觸電。



## ■ 定期更換活性炭

雙活性炭匣內的活性炭需要定期更換以保持除臭效果。  
您可以利用活性炭包更換內部的活性炭。  
建議至少每 6-8 個月更換活性炭，視使用頻率調整更換活性炭。

- 1 當 (    ) 和警示燈依序閃爍時，代表應更換活性炭了。


- 2 請參考第 8-9 頁的「首次使用須知」章節更換活性炭。

- 3 蓋上蓋子，接著同時長按 (   ) 3 秒鐘，讓機器確認已更換新的活性炭。

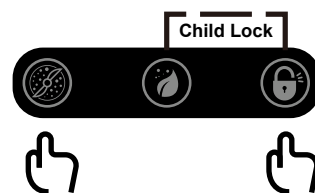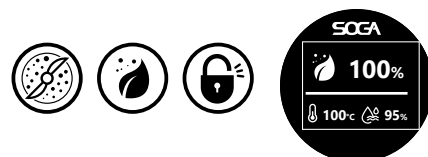

## 如何放置內鍋

放置內鍋時，要將防燙手把與內鍋內側邊緣的中心軸線對齊（如下圖所示的兩個凹陷區域），然後將提手放回原位。

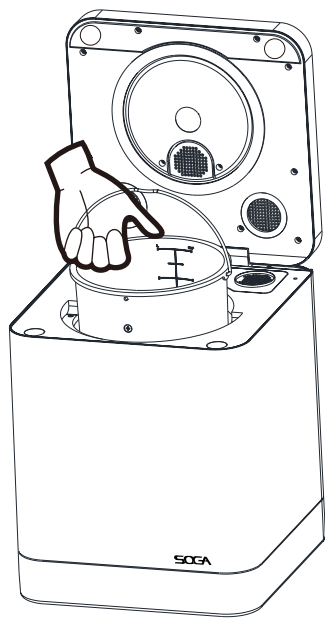

### 注意

如果內鍋不能輕易地放入機器內，請稍微轉動內鍋確認是否對齊，若是仍然無法安裝，請稍微轉動內鍋底部的螺栓，然後再試一次。

### 使用注意事項

1. 請勿放入含水量高的廚餘。
2. 在裝置運行時，請勿打開蓋子。
3. 在裝置停止運行後避免立即觸摸金屬桶，以免燙傷。
4. 請勿放入非廚餘以外的其他垃圾。
5. 請勿將裝置放置在會受雨淋或靠近水槽的地方。
6. 安全使用電源，確保有適當的電力和保護措施。
7. 在清潔前先拔掉裝置的插頭。
8. 請勿在沒有技術指導的情況下拆卸或修改產品。
9. 請勿讓兒童單獨操作該裝置。

# 故障排除

問題	可能的原因	解決方案
<b>警示燈持續亮起</b>	運作過程可能遭遇堵塞。	<ol style="list-style-type: none"> <li>1.關閉電源開關並拔掉電源線，等待廚餘機皇完全冷卻。</li> <li>2.檢查 MEGA 廚餘機皇內部，確保沒有異物卡住。</li> <li>3.檢查產品的馬達和齒輪，確保它們運作正常且沒有卡住。</li> <li>4.檢查風扇和排氣管道，確保它們沒有被異物堵塞。</li> </ol>
<b>設備運行時出現異常的尖銳噪音或振動</b>	設備過熱。	<ol style="list-style-type: none"> <li>1.立即停止使用該設備。 為確保安全處理，建議將設備放置在通風良好、遠離易燃物的地方冷卻。</li> <li>2.通風良好、遠離易燃物的地方冷卻。</li> <li>3.檢查設備是否有任何可能導致過熱的阻塞或障礙物。</li> </ol>
		如果您無法自行解決這些問題，請儘快聯繫客戶服務。
<b>運作過程中發出強烈的異味</b>	活性炭過期，系統無法有效地過濾出氣味。	<ol style="list-style-type: none"> <li>1.定期清潔廚餘機皇的內部，確保清潔無異味且無細菌生長。</li> <li>2.定期更換雙活性炭匣中的活性炭，以</li> <li>3.保持最佳效果。</li> </ol>
<b>設備的處理時間延長</b>	設備內鍋的廚餘含水量過高，造成不均勻或不充分堆肥的發酵。	<ol style="list-style-type: none"> <li>1.確保裝置內部通風良好，有足夠的空氣流通和排氣。</li> <li>2.添加適當材料：仔細閱讀手冊，了解應添加到堆肥中的合適材料和用量。</li> </ol>
	設備內部的排風孔或者雙活性炭匣堵塞。	<ol style="list-style-type: none"> <li>3.定期清潔：定期清潔MEGA廚餘機皇，保持裝置內部清潔，避免產生異味和細菌滋生。</li> </ol>

# 保固及正確處理 MEGA 廚餘機皇

## ■ MEGA 廚餘機皇產品保固說明

再次感謝您選購 MEGA 廚餘機皇。以下為您提供 MEGA 廚餘機皇的保固條款：

若在使用期間內因遵循注意事項而發生故障，我們將提供免費維修服務。請聯絡您購買的零售店進行申請。由於此商品只提供維修服務，若郵寄修理，郵費等費用需由客戶負擔。

### 保固期限：

- 本保固自購買日起生效，為期兩年。保固期限以購買憑證上的發票日期為準。請保留發票作為保固的有效證明。

### 保固範圍：

當產品因下列情況造成故障或損壞時，屬於有償維修範疇：

- 使用上的錯誤、不當修理或改裝所致的故障和損壞。
- 購買後的運輸、移動、掉落等導致的損壞或故障。
- 火災、地震、水災、雷擊、天災、公害、鹽害、害蟲、氣體危害（如硫化氫等）以及異常電壓、非指定電壓等導致的損壞或故障。
- 商業用途等一般家庭以外使用的情況導致的損壞或故障。
- 安裝在車輛、船舶等交通工具中所導致的損壞或故障。

本保固涵蓋 MEGA 廚餘機皇的製造缺陷及與原始設計、材料或製造過程有關的問題。若因上述問題導致機器功能異常，我們將提供免費維修或更換損壞部件的服務。

### 保固條件：

- 本保固只適用於正常使用條件下的故障。若因不當使用、意外事件、自行拆解或未經授權修理所導致的損壞，將不在保固範圍內。
- 請確保按照產品手冊所述的使用方法使用 MEGA 廚餘機皇，以確保保固有效。

### 保固服務：

- 若在保固期間內發現任何故障或問題，請聯繫我們的客戶服務中心。我們將盡快為您提供專業的支援與服務。
- 如需進行保固維修，請攜帶購買憑證或發票前往指定維修服務中心，或依照我們指示進行後續處理。

### 限制與排除：

- 本保固不涵蓋正常的消耗性零件，如刀片、濾芯等，以及因自然磨損或不當使用而造成的損壞。
- 不在保固範圍內的損壞可能需要額外收取維修費用，我們將會提前告知您相關費用。
- 相關產品疑慮可連繫 Line 官方帳號：@tvsoga

※本保固說明是為了保證在規定的期限內提供免費維修而發行的，不會限制發行本保固書的當事人（保固負責人）以及其他業者對客戶的法定權利。因此，如果對於保固期後的維修等有任何疑問，請諮詢您購買的零售店或我們的客戶服務中心。

## ■ 正確處理 MEGA 廚餘機皇

這個標誌表示此產品在整個歐盟範圍內不應與其他家庭廢棄物一同處置。為了防止未經控制的廢棄物處置對環境或人類健康造成可能的傷害，請負責任地回收它，以促進可持續再利用的物質資源。

若要回收您使用過的設備，請使用回收和收集系統，或聯繫購買產品的零售商。他們可以將這個產品進行環境安全的回收。

# IMPORTANT SAFEGUARDS

**To reduce the risk of serious injury when using your MEGA composter and accessories, please follow these safety precautions, including the following.**

READ ALL INSTRUCTIONS, SAFEGUARDS, AND WARNINGS BEFORE OPERATION.


1. Carefully read all instruction materials that accompany this product.
2. To avoid electrical shocks, keep cords, plugs, and portable electrical appliances away from water and other liquids.
3. DO NOT immerse the base unit in any liquid, including water.
4. Keep the appliance and power cords out of reach of children.
5. When the electric kitchen composter is used by or near children or individuals with disabilities, ensure that they are closely supervised.
6. To avoid inadvertent activation, unplug the unit from the outlet when not in use, before putting on or taking off parts, and before cleaning.
7. The electric kitchen composter must only be plugged into properly grounded outlets.
8. DO NOT let the electrical cord dangle off the counter or table edge.

## Power Failure and Troubleshooting Guide

**When the machine fails to operate, please follow the steps below for troubleshooting, and adhere to safety precautions:**

GFI circuit breakers may be installed in your kitchen. Locate them in outlets near sinks. If the MEGA Composter won't operate, unplug the unit. Reset the wall outlet or circuit breaker. If the circuit breaker continues to trip, unplug the MEGA Composter from the outlet. Allow the MEGA Composter to sit for 24 hours before attempting to use it again. Contact


**IF THE ISSUE PERSISTS, PLEASE CONTACT OUR CUSTOMER SERVICE**

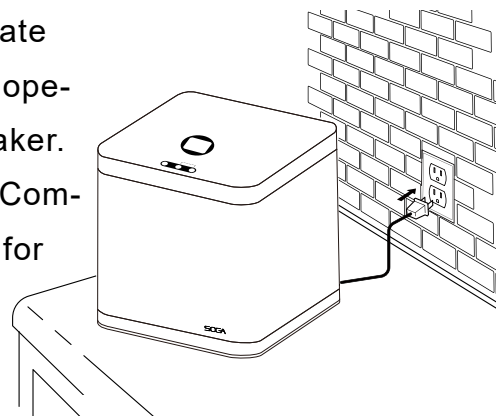

- 
9. Allow the MEGA Composter to cool before opening the lid (approximately 35 minutes after the cycle has completed). Allow the MEGA Composter's interior components to cool completely before handling. Use the provided handles or knobs to handle it safely.
  10. DO NOT open the lid of the electric kitchen composter while it is running. Always stop the cycle mode before opening the lid.
  11. DO NOT put your hands inside the MEGA Composter unless it has completely finished cycling and has gone through all the cycle modes.
  12. NEVER touch moving parts. DO NOT reach your hand inside the bucket when the bucket is inserted in the MEGA Composter. Remove the bucket from the MEGA Composter before adjusting the bucket contents.
  13. DO NOT operate any appliance with a damaged cord or plug. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
  14. DO NOT operate any appliance showing signs of malfunction or any product that has been dropped or damaged in any way.
  15. The use of attachments not recommended or sold by the manufacturer could result in fire, electric shock, or injury.
  16. DO NOT operate the machine outdoors if the MEGA Composter is at all exposed to the elements.
  17. DO NOT place the MEGA Composter on or near a hot gas or electric burner.
  19. DO NOT place the electric kitchen composter in a heated oven.
  20. Keep the electric kitchen composter out of direct sunlight.
  21. DO NOT dismantle, modify, alter, or adapt the electric kitchen composter in any way.
  22. To allow proper airflow, make sure to place the electric kitchen composter at least 6 inches from all walls and in a well-ventilated space (See Figure 1).




- 
- 23.Ensure that the electric kitchen composter sits on a flat, dry, stable surface.
- 24.DO NOT deposit food waste directly into the electric kitchen composter without installing the bucket.
- 25.DO NOT consume or ingest dehydrated food waste or any food waste that has been placed into the bucket.
- 26.The inside wall of the bucket has a thin and indented fill line, indicating the maximum level of food waste. Please do not add any food waste above this line (See Figure 2).
- 27.DO NOT squish and add the food waste once it is over the Max Line (5.2L). Overloading the bucket could result in a jam (See Figure 2).
- 28.Always ensure that no food waste falls outside of the bucket and into the unit.
- 29.DO NOT place any food waste that is larger than the size of a human palm inside the bucket. Make sure to cut up rigid stems/fibrous vegetables (flower stems, broccoli ' stems, kale stems). So that they don't get stuck during grinding.

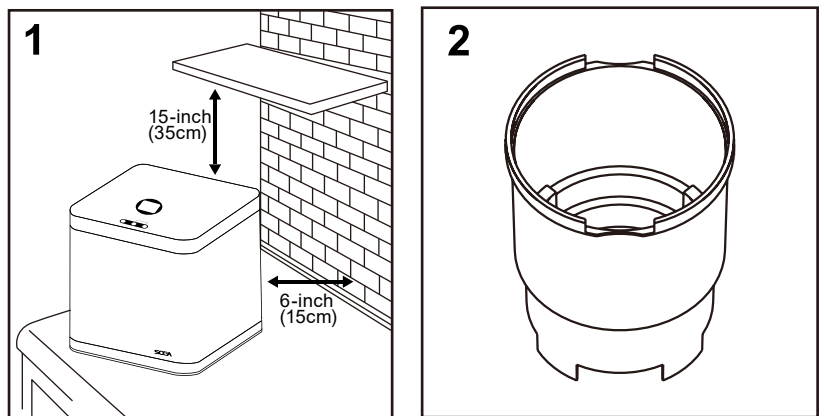

## WARNING

### Electrical Shock Hazard.

- **DO NOT immerse the base unit in any liquid including water.**  
Do not allow the base to come into contact with any liquids, including water. Failure to adhere to this precaution may result in the risk of electric shock.
- **ONLY use an earthed outlet.**  
Ensure that the product is connected only to a grounded outlet. Using non-grounded outlets may pose a danger.
- **DO NOT remove the earth.**  
Do not remove or damage the grounding wire to ensure safe usage.
- **DO NOT use an adapter.**  
Plug directly into a grounded outlet and refrain from using adapters or extension cords to prevent potential hazards.
- **DO NOT use an extension cable.**  
When cleaning or not actively using the product, it is essential to unplug it to mitigate potential risks.
- **Always unplug before cleaning or when not in use.**  
Non-compliance with the above guidelines may lead to severe dangers, including the risk of death or electric shock.
- **Prioritize Safety**  
Failure to follow instructions can cause death or electric shock.

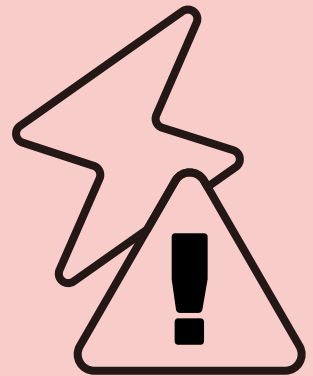


### SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

The instructions provided in this Use and Care Manual may not encompass every conceivable condition and situation that could arise. It is essential to exercise common sense and caution when operating and maintaining any appliance.


# ABOUT MEGA COMPOSTER

MEGA Composter is a compact and efficient device designed to transform food waste into nutrient rich compost right in your kitchen. Equipped with a powerful motor, built-in shredder, and carbon filter, the MEGA Composter grinds and chops food scraps, eliminates odors, and produces compost rapidly. Its sleek design and compact size make it a stylish and space-saving addition to any kitchen. By utilizing the MEGA Composter, you not only reduce your carbon footprint but also create compost for your garden or houseplants, contributing to the minimization of waste sent to landfills.

## PRODUCT DIAGRAM

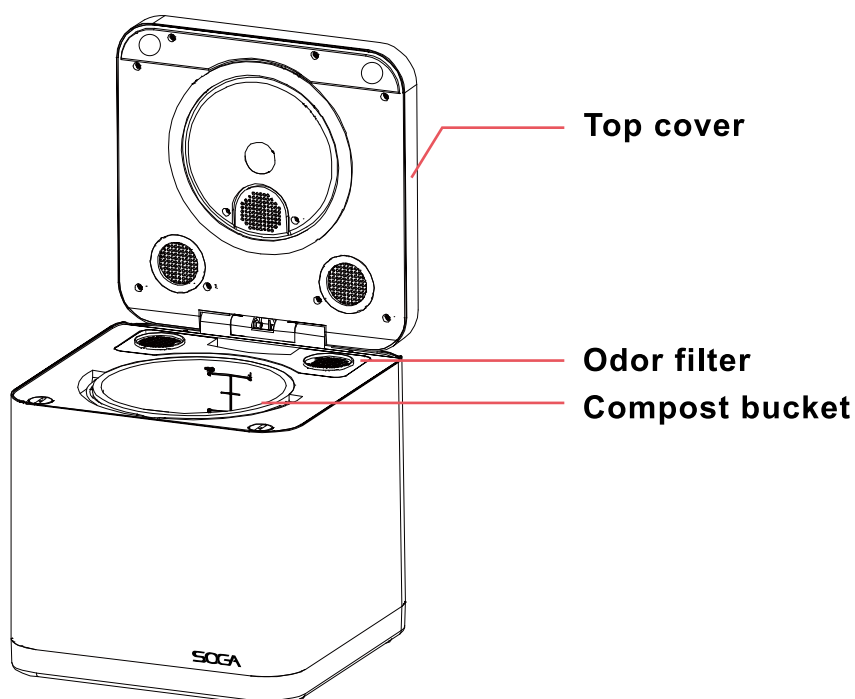

## CONTROL PANEL

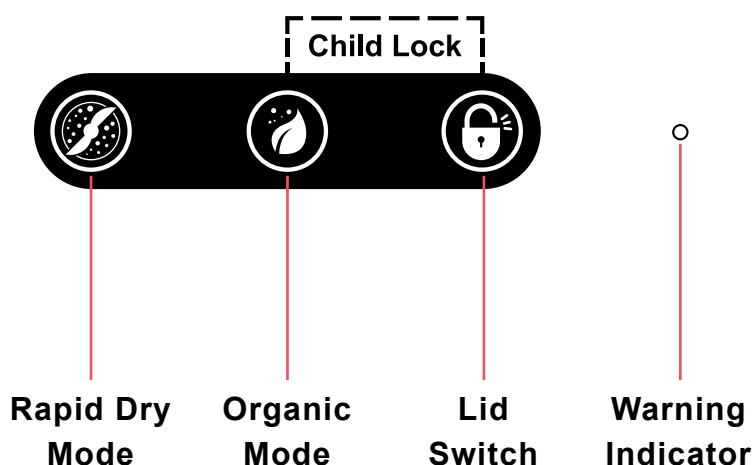


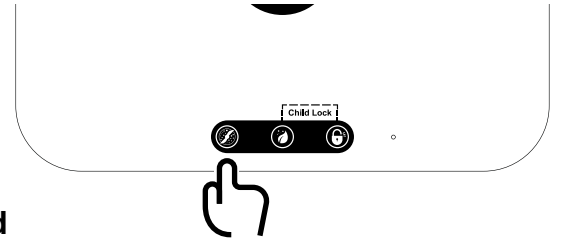
# FUNCTION DESCRIPTION

## Button Description




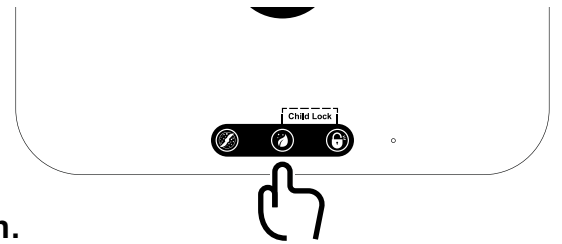
### Rapid Dry Mode

Plugged into outlet, then press and hold (  ) for 3 seconds to start Rapid Dry Mode, the indicator always lights on when working. To exit this mode, press and hold for 3 seconds again.




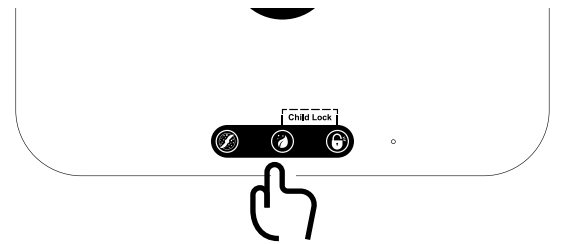
### Organic Mode

Press and hold (  ) for 3 seconds to start Organic Mode, the indicator always lights on in the working state. To exit this mode, press and hold for 3 seconds again.




### Lid Switch

Press and hold (  ) for 3 seconds to open the lid. The lid cannot be opened in a working state. To open the lid, please exit the working mode first



### Warning Indicator Light



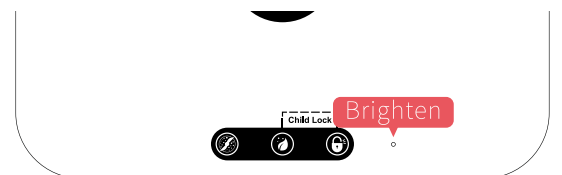




The warning indicator light turns on when the machine is clogged or under abnormally high temperatures.



# OTHER FUNCTION DESCRIPTIONS


## Special Function Description

### Automatic Cleaning Mode






Pour 1500 milliliters of water and an appropriate amount of dishwashing liquid into the tank. Press and hold the (  +  ) for 3 seconds, and a (  ) displayed on the LCD panel indicates successful activation. During the one-key cleaning operation, the (  ) and (  ) will remain illuminated. To exit this mode, press and hold the (  +  ) for 3 seconds again.

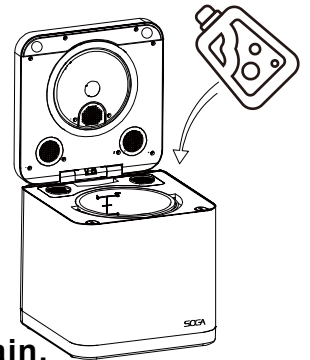
(It takes around 30 - 45 minutes to complete the cleaning.)

※ After cleaning is complete, manual closure and exit of this mode are required to ensure the normal operation of the machine.




### Child Lock Mode


Child Lock is a safety feature that prevents accidental activation of the device by children. Hold both (  +  ) for 3 seconds to active Child Lock Mode, the indicator (  ) always lights on. To exit this mode, hold both (  +  ) for 3 seconds again.

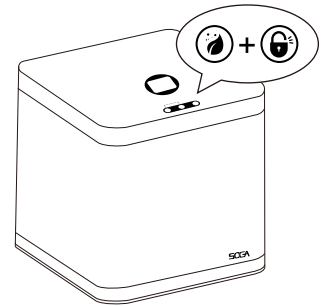


# PACKAGE CONTENTS

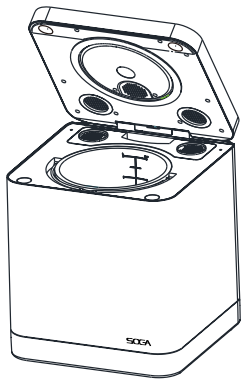


**MEGA Composter**

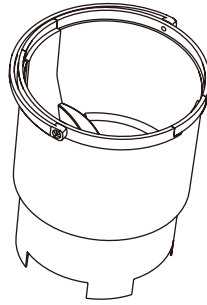

**Composter Bucket**

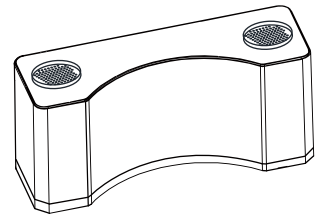

**Odor Filter**

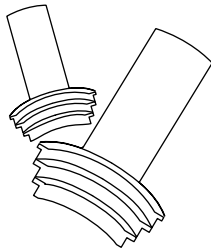

**Detachable blades**



**Microbial  
Compost Accelerator**



**Activated  
Carbon Refill**

<b>Product Name</b>	Kitchen waste disposers for domestic use
<b>Input</b>	C-005-01-TW : 100-110V C-005-02-HK : 220-240V
<b>Capacity</b>	5.2L
<b>Weight(Product):</b>	12.2KG
<b>Unit Size(LxWxH)</b>	314X314X368(mm)
<b>Wattage</b>	Max 650W
<b>Waste Volume Reduction</b>	Rapid Dry Mode: ≥85% Organic Mode: ≥90%
<b>Processing Time</b>	Rapid Dry Mode: 3-8H Organic Mode: 6-14H
<b>Noise Level</b>	<45dB


# BEFORE FIRST USE

## ■ Activated Carbon Refill Replacement Steps

Before initial use, please add activated carbon to the activated carbon cartridge. Ensure the proper operation of the kitchen waste processor and achieve optimal deodorizing effects.


1

Remove all packaging from your MEGA Composter and its accessories.

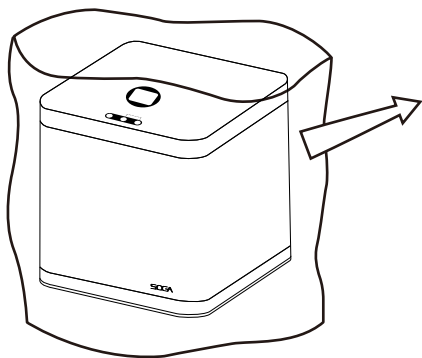


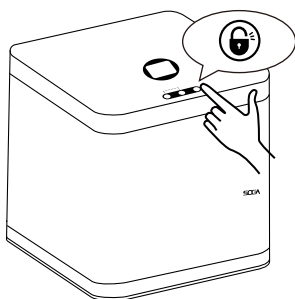
2

Place the MEGA Composter on a stable and level surface. Then, connect the power supply.

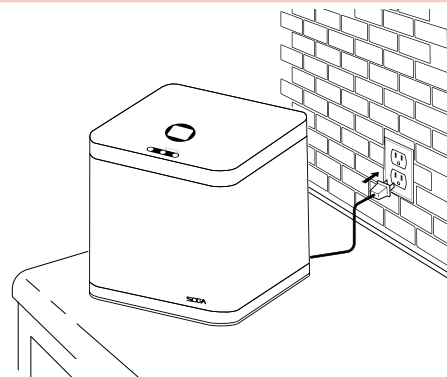


3

Press and hold the lid switch button (  ) for 3 seconds to open the lid.




4

Pull out the odor filter as indicated by the arrow in front of the bucket.

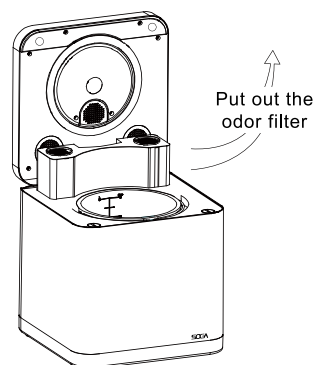


5

Stick your hand in the groove of the lid and pull it left and right. Then Fill both sides of the odor filter with fresh activated carbon to ensure maximum efficiency.

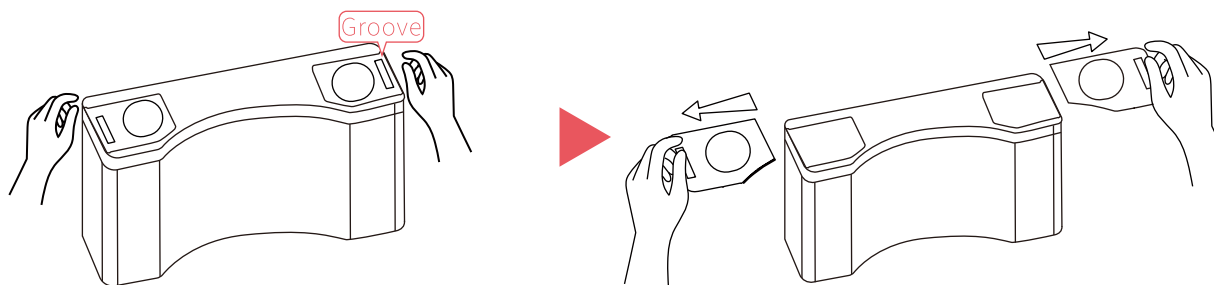

**6**


Pour activated carbon refill into the container until it reaches eighty percent (80%) capacity.

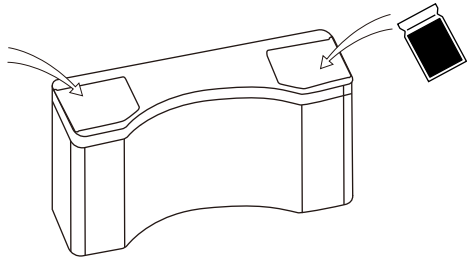


※ Fill the activated carbon cartridge to 80% capacity for maximum adsorption efficiency, improved air circulation, and enhanced effectiveness.

**7**

Push the lid along the left and right slots with your hands until it locks.

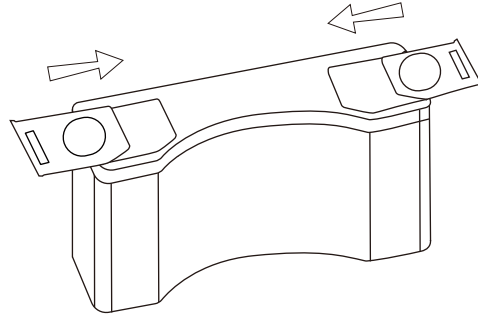**8**

Install the odor filter back to the machine.

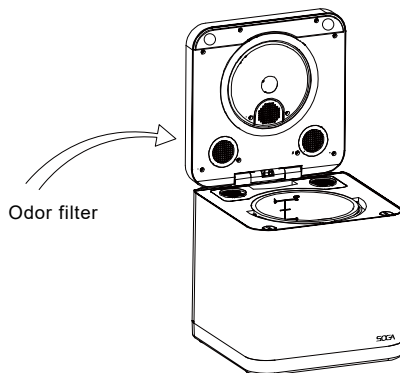



## ■ OPERATION INSTRUCTIONS

---

### **MEGA Composter MODES**

MEGA Composter has two different modes, so be sure to select the one that best suits your needs. Here are some details pertaining to each mode.

#### **Rapid Dry Mode**



The "Rapid Dry Mode" quickly dries and reduces food waste size and weight. It automatically adjusts temperature and humidity for efficient composting. Ideal for those wanting the fastest results with low energy consumption. Drying and grinding mode working time: 3-8 hours.

※ Avoid using the rapide dry mode for bioplastics, compostable commercial goods, and packaging

#### **Organic Mode**



The "Organic Mode" utilizes the Microbial Compost Accelerator to transform food waste into organic compost. Add one unit of Microbial Compost Accelerator and select "Organic Mode" on the control panel. The device will automatically operate for a specified duration until the waste is completely decomposed. The process typically takes 6-14 hours.

※ Energy Conservation: Both working modes adopt intelligent frequency conversion technology to automatically adjust the torque of the motor based on the hardness of kitchen waste, effectively saving energy and reducing consumption.


## ■ Operating Steps

1

### Plugged into outlet.

※ If the unit is powered on but neither Rapid Dry Mode nor Organic Mode is activated within 15 seconds, the device will automatically enter sleep mode.

2

Press and hold (  ) for 3s to open the lid.

3

Remove the bucket from the unit.  
Using the handle, pull the compost bucket straight up from the unit.


4

### Add food waste to the bucket.


※ Refer to "What can I put in the unit?" on page 13 for guidance.

### Guidelines for Pouring Kitchen Waste


- Cut waste into smaller pieces if necessary
- Fill up the compost bucket until the max line (5.2L)
- If you want to select Organic Mode, please add 1 microbial compost accelerator

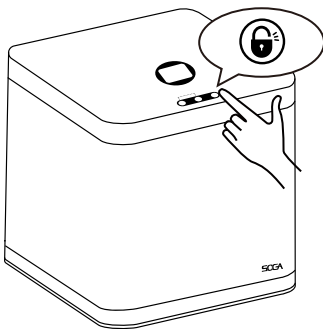

Open the lid switch

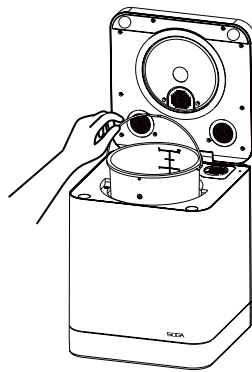

Remove the inner pot

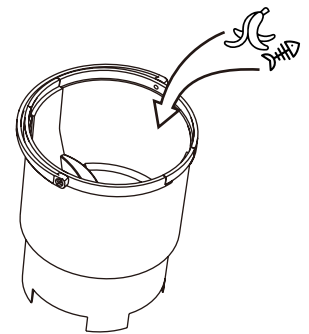


Place kitchen waste into the bucket

**5**

Insert the bucket by aligning the carrying handle with the center axis (that is two recessed areas on the inside edge as shown below) and put the handle back in its place.

※ If the bucket does not easily drop into the unit, slightly turn the bolt on the compost bucket's bottom and try again.

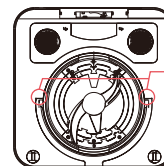

Align the carrying handle with these two recessed areas



**6**

Close the lid.



**7**

Start a cycle by pressing the below button.








### Rapid Dry Mode

Press and hold (  ) for 3s to start Rapid Dry Mode with beep. During the cycle, if you want to pause the unit, please press and (  ) hold for 3s.

### Organic Mode





Press and hold (  ) for 3s to start Organic Mode with beep. During the cycle, if you want to pause the unit, please press and hold (  ) for 3s.

## Automatic Cleaning Mode


Press and hold icons (  +  ) at the same time for three seconds to start the automatic cleaning mode. and a (  ) displayed on the LCD panel indicates successful activation. During the one-key cleaning operation, the (  ) and (  ) will remain illuminated. To exit this mode, press and hold (  +  ) for 3 seconds again. After 30-45 minutes, the automatic cleaning mode is complete.

### Note:

· During the cycle, if the warning indicator light turns on, it means that the machine is clogged or under abnormally high temperatures. You can pause the unit and open the lid to check it.

· If there are children near the unit, it is recommended to open Child Lock Mode. Press and hold (  +  ) at the same time for 3 seconds with beep to start Child Lock Mode. If you want to cancel this mode, press and hold (  +  ) at the same time for 3s with beep again.

Recommended waterline above here

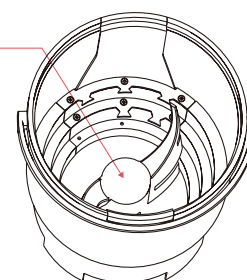

## Completing a Cycle

Once the composting cycle is finished, the unit will emit ten beeps before entering sleep mode.

- Remove the bucket and utilize the compost accordingly.
- Dispose of any waste soil in either the green bin or the garbage bin.
- The compost produced in Organic Mode can be directly added to your garden soil.

For detailed instructions on how to nourish your garden, please refer to "How to feed your garden" on page 35.

**Note:** During sleep mode, the mixing blade will rotate slowly in a clockwise direction for 100 seconds, next time by a counterclockwise rotation for 100 seconds every 15 minutes. The internal fan of the device will also start and stop synchronously with the mixing blade, ensuring that the temperature inside the compost bucket remains below 85°F/30°C.

## Key Points for Blade Installation


1. Place the blade gently into the groove.
2. Ensure the blade is snug against the edge of the groove and slides smoothly along it.
3. Ensure the blade is fully seated and flush against the pot wall for stability and safety.

※ Caution: Be careful of sharp edges at the right-angle bends of the groove when disassembling the blade to avoid scratching hands.



## Disassembly and cleaning

Open the lid, use the handle to remove the compost bucket from the machine, and then pull out the detachable blades on both sides for cleaning.

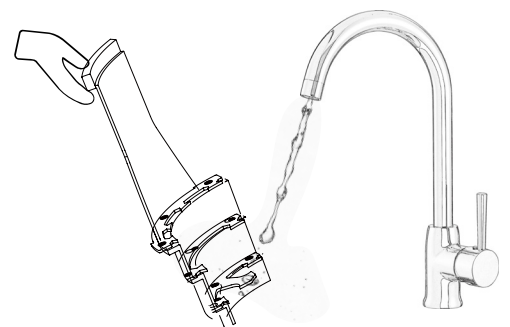


# WASTE CLASSIFICATION GUIDELINES



## Professional Translation:

- All types of food waste are acceptable in all modes.
- Mixing various food wastes enhances machine efficiency for optimal results.
- Dispose of processed powder as general waste when completed.


## Do's

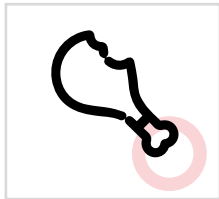


**Hard bones**  
(chicken, beef, pork, lamb)




**Fruit and vegetable scraps**

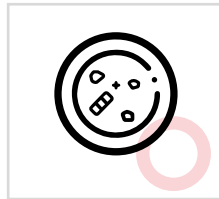

**Food leftovers, plate scraping**

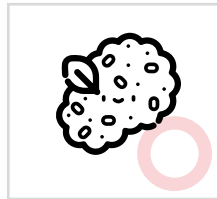

**Meat scraps**

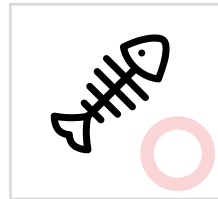


**Soft bones**  
(fish)



**Soft shells**  
(eggs, shrimp)




**Coffee filter, ground, and tea bags**

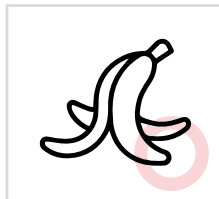

**Soft peels**



**Rinds**  
(watermelon, melon)

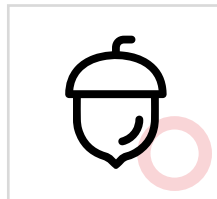

**Nuts**



**Starches**  
(bread, pasta, rice, potatoes, cereals, oats and other grains)



**Dairy products**  
(cheese, yogurt)



**Fruit pits**  
(avocados, peaches, apricots, nectarines, mango)



**Houseplants, plants and flowers**



**Yard trimmings**



**Plant Stems/Fibers**  
(Flower Stems, Broccoli Stems, Kale Stems)

 


It is advised to cut up tough plant stems/fibrous vegetables to avoid jamming during grinding. Damage to the bucket caused by adding items not meant for disposal is not covered under the warranty.

## ✗ Dont's



Cooking oils, grease, liquids



Foil wrap



Soaps, shampoo and conditioner bars



Diapers, wipes, hygiene products



Lined bags  
(chip, cookie, pet food)



Produce netting



Soiled diapers, baby wipes



Styrofoam



Cigarettes



Pet waste



Metal, plastic, glass



Alcohol

# TIPS FOR GREAT PERFORMANCE



**You can put food waste in all modes. A diverse mixture of food waste will allow machine to perform and give the best results.**

1. The more variety of fruits and vegetables in your food waste and scraps, the better end result.
2. Have an even mix of light and heavy food scraps interspersed.
3. Do not leave your unprocessed waste for a long period of time (over a week). Run a smaller cycle if necessary.
4. Tuck bio plastic materials on the sides of the bucket, rather than just placed on top.
5. Avoid large amounts of dense or moisture-rich composition foods such as condiments and high sugar fruits.
6. Use microbial compost accelerator to improve waste breakdown, increase biotic content, and further suppress odors.
7. The waste inside the inner bucket does not need to be cleaned as often as possible because the organic fertility of food waste is stronger after repeated fermentation and decomposition.

## How to feed your garden

• What comes out of composter doesn't have to end there. The Compost Starter that Organic Mode produces can be used to feed your garden.

• Organic Mode's compost is ready to be added to your garden soil in a ratio of 1 part Organic Mode's compost to 10 parts soil.



**1:10**



• The filter contents once used up can also be used as an additive to your soil! Mix in a ratio of 1 part activated carbon to 6 parts soil.




**1:6**



## Utilization of Compost

The harvested compost can be used to make organic fertilizer, and the rest can be stored in a sealed container.

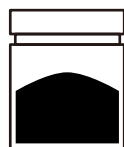

The harvested compost can also be disposed of as general waste.



# CARE & MAINTENANCE

## ■ CLEANING:

**Remove the compost bucket and clean it once a week (recommended)**

**1** Ensure the unit is unplugged before cleaning.

**2** You can use a brush to remove any debris stuck to the interior walls in the unit, including the exhaust filter.




**3** The compost bucket can be directly placed in a household dishwasher for cleaning.




**Never submerge the whole unit under water. There are electrical components and any excess water would cause significant damage and could cause electric shock.**



## ■ Regular replacement of the odor filter


**The odor filter needs to be replaced regularly to maintain its deodorizing efficiency, either by replacing the entire filter or just the activated carbon inside. The recommended replacement interval is every 6-8 months, depending on how often it's used. Adjust the filter's lifespan accordingly.**

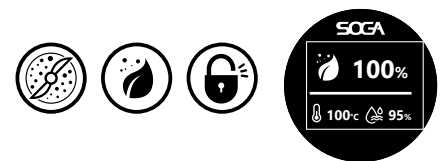**1** When the icons (    ) and the warning indicator flash in sequence, it is time to replace the odor filter.



**2** Replace the odor filter as described in the chapter "BEFORE FIRST USE" on page 28-29.



**3** Close the lid, then press the icon (   ) for three seconds at the same time to allow the machine to confirm that it has been replaced with a new odor filter

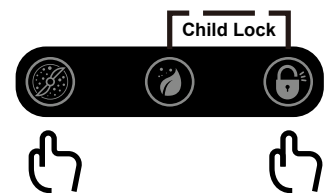



## HOW TO INSERT THE BUCKET

**Insert the bucket by aligning the carrying handle with the center axis (that is two recessed areas on the inside edge as shown below) and put the handle back in its place.**

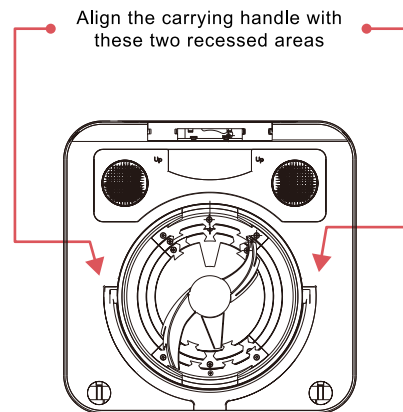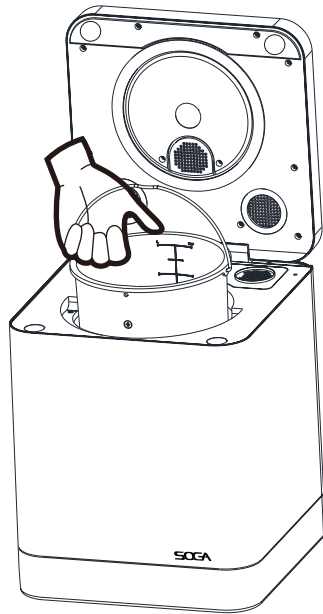

**!** If the bucket does not easily drop into the unit, slightly turn the bolt on the compost bucket's bottom and try again.

## USAGE PRECAUTIONS

1. Please do not put kitchen waste with high water content.
2. DO NOT open the lid during the device's operation.
3. Please do not touch the metal bucket immediately after it stops working to avoid burns.
4. Please do not put other garbage that is not food waste.
5. DO NOT place the unit in an area that is exposed to rain or near a sink.
6. Use electricity safely and ensure that appropriate power and protection are in place.
7. Remember to unplug the device before cleaning it.
8. DO NOT disassemble or modify the product without technical guidance.
9. DO NOT allow children to operate the unit alone.

# TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	SOLUTION
<p>Warning indicator light is on continuously</p>	<p>The operational process may encounter blockages</p>	<ol style="list-style-type: none"> <li>1. Turn off the power switch and unplug the power cord. Wait for the composter to cool down completely.</li> <li>2. Check the inside of the composter to ensure that no foreign objects are stuck inside.</li> <li>3. Examine the motor and gears of the composter to ensure proper functionality and to verify that they are not jammed.</li> <li>4. Inspect the fan and exhaust duct to ensure they are not obstructed by foreign objects.</li> </ol>
<p>Abnormal sharp noise or vibration during the operation of the equipment</p>	<p>The unit maybe overheat.</p>	<ol style="list-style-type: none"> <li>1. Cease the use of the unit immediately.</li> <li>2. For safe handling, it is recommended that the unit be allowed to cool down in a wellventilated area, away from any flammable materials.</li> <li>3. Inspect the unit for any blockages or obstructions that may be causing it to overheat.</li> </ol> <p>If you are unable to resolve these issues on your own, please contact customer service as soon as possible</p>
<p>Strong odor emitted during operation</p>	<p>Due to the failure to timely replace the expired odor filter, the system has become incapable of effectively filtering out unpleasant odors.</p>	<ol style="list-style-type: none"> <li>1. Ensure the composter is regularly cleaned to maintain a clean interior, free from odor and bacterial growth.</li> <li>2. Maintain filtering effectiveness by regularly replacing the activated carbon in the odor filter.</li> </ol>

<p><b>The quality of the compost produced has decreased.</b></p>	<p><b>Excessive or insufficient internal humidity, resulting in uneven or inadequate fermentation of the compost.</b></p>	<ol style="list-style-type: none"> <li><b>1. Ensure proper ventilation inside the unit to allow for adequate airflow and exhaust.</b></li> <li><b>2. Add appropriate materials: Read the manual carefully to learn about the suitable materials and amounts to be added to the compost.</b></li> <li><b>3. Regular cleaning: Clean the composter regularly to keep the unit's interior clean, avoid odor, and prevent bacterial growth.</b></li> </ol>
	<p><b>Poor ventilation or blocked exhaust inside the unit, which may also affect the quality of compost fermentation</b></p>	

# WARRANTY INFORMATION

## ■ MEGA Composter Product Warranty Information

**Thank you for choosing the MEGA Composter. Please find below the warranty terms for your MEGA Composter:**

For malfunctions during proper use, contact the store for free repairs. Customers are responsible for postage and fees for mail-in repairs.

### **Warranty Period:**

This warranty takes effect from the date of purchase and is valid for two year. The warranty period is determined by the invoice date on the purchase certificate. Please retain the invoice as valid proof of warranty.

### **Warranty Coverage:**

When the product malfunctions or incurs damage under the following circumstances, it falls within the scope of chargeable repairs:

Faults and damages caused by misuse, improper repairs, or modifications.

- Damages or malfunctions resulting from transportation, movement, drops, etc., after purchase.
- Damages or malfunctions caused by fire, earthquakes, floods, lightning, natural disasters, pollution, salt damage, pests, gas hazards (such as hydrogen sulfide), abnormal voltage, non-specified voltage, etc.
- Damages or malfunctions resulting from non-household use, including commercial purposes.
- Damages or malfunctions caused by installation in vehicles, ships, or other modes of transportation.

This warranty covers manufacturing defects in the MEGA Composter and issues related to the original design, materials, or manufacturing process. If the machine's functionality is compromised due to the aforementioned issues, we will provide free repair or replacement of damaged components.

### **Warranty Conditions:**

- This warranty is applicable only to malfunctions occurring under normal usage conditions. Damages resulting from improper use, unforeseen events, self-disassembly, or unauthorized repairs are not covered under the warranty.
- Please ensure the MEGA Composter is used in accordance with the instructions outlined in the product manual to guarantee the validity of the warranty.

### **Limitations and Exclusions:**

- This warranty does not cover normal consumable parts such as blades, filters, etc., or damages caused by natural wear and tear or improper use.
- Damages not covered under the warranty may incur additional repair charges, and relevant fees will be communicated to you in advance.
- Concerns regarding related products can be addressed by contacting the official Line account: @tvsoga

※ **This warranty provides free repairs within the specified period, preserving legal rights. For postwarranty inquiries, contact the store of purchase or our customer service center.**

---

## ■ CORRECT DISPOSAL OF THIS PRODUCT

This symbol signifies that within the EU, this product should not be discarded with regular household waste. To avoid potential harm to the environment or human health, please recycle responsibly to support sustainable material reuse. Use recycling systems or contact the retailer where you bought the product for environmentally safe recycling.

**SOGA**